

Caphook, Headstrap & Caphookstrap

Instruction

Roobuck Pty Ltd

62 May Rd. Narrabeena NSW 2099

Phone: 02-9981 3899 Fax: 02-9981 3826

Email: info@roobuck.com.au

Web: www.roobuck.com.au

 


Lamp Accessories

1



Caphook



Headstrap

Caphookstrap =
1 Headstrap + 4 Caphooks

Headstrap

2



A Headstrap is used to wear a LEDEX Headlamp over a cap or directly on the head.

Caphook

3



LEDEX Caphooks securely hold the headstrap onto any hardhat. This enables a wide variety of Caplamps to be worn on a hardhat securely.

Caphookstrap - 1

4



A LEDEX Caphookstrap can be used to wear any miner's caplamp on a hardhat. This is particularly helpful where a Caplamp is only used periodically, and a hardhat is preferred use. The caplamp fits into the Lamp Bracket on the front of the strap, while Four Cap Hooks hold the strap firmly onto the hardhat.

Caphookstrap - 2

5



A Caphookstrap can be used to wear any LEDEX caplamp on a hardhat including the Ledex LC 8 traditional caplamp and any of our cordless caplamps.